


ELD LOGIN / OPERATION


THINGS TO KNOW – CHANGES WITH ELD

- MUST LOGOUT EVERY TIME YOU LEAVE THE TRUCK
- There is no longer a movement tolerance
- Once you reach 5 mph it will switch to the Drive-line
- Can no longer change DRIVE time to any other status
- If you go into the Drive-line instead of OFF PC, you must annotate your logs as such and keep track of your hours (and still do the pnet) for the shift. Once a qualifying break is taken pnet will be accurate.
- New status: ON DUTY/YARD MOVE. Enables you to drive at terminals or customers without going into the Drive-line. It is an On-duty event. **If you hit 20 mph it will put you in the Driveline
- Logs MUST be certified EVERY day
- Driver can make changes to logs for ON and OFF DUTY events

ELD LOGIN / OPERATION

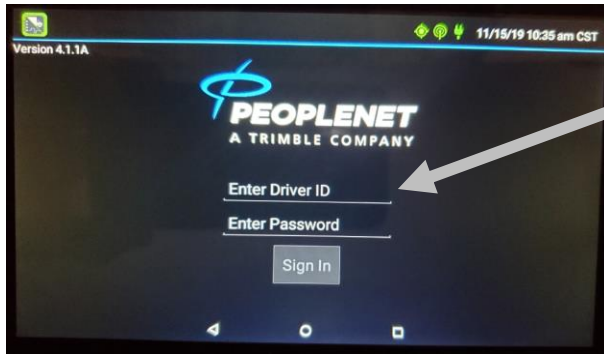


- To login tap your finger on Enter Driver ID

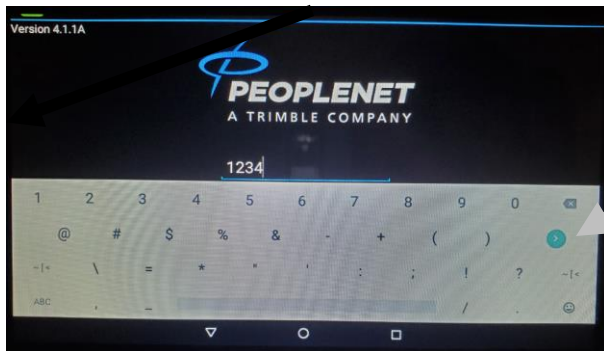




- The keyboard will come up to type in your DRIVER ID

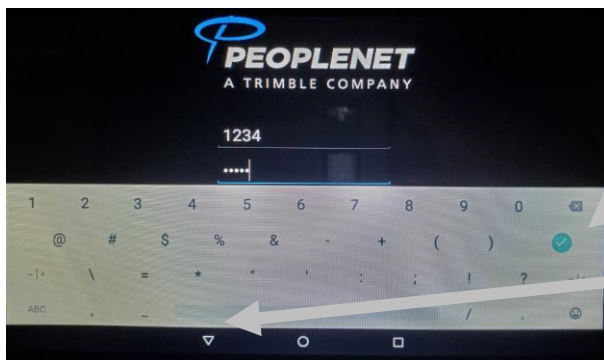- Tap the circle on the keyboard (notice the shape inside the circle. That means there are additional field that need to be filled in.) This will advance the cursor for you to enter your PASSWORD



- With your password entered you can either hit the circle which now





has a checkmark in it  or tap the upside-down arrow  at the bottom and tap SUBMIT.

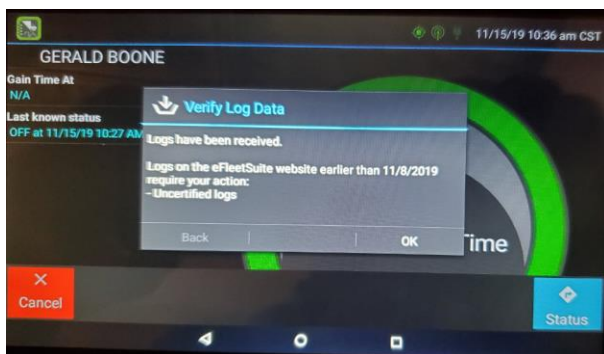

- The Verify Log Data screen will come up saying logs have been received.



- If you have not certified your logs, it will tell you. Touch OK.

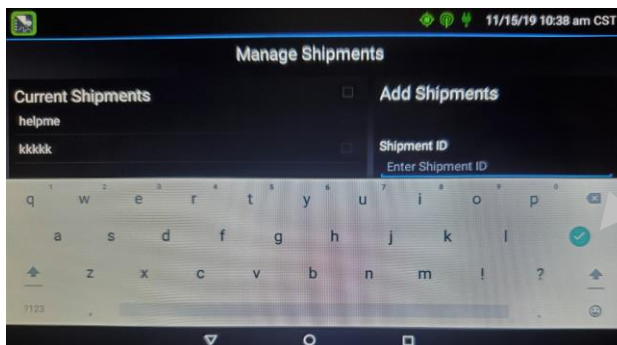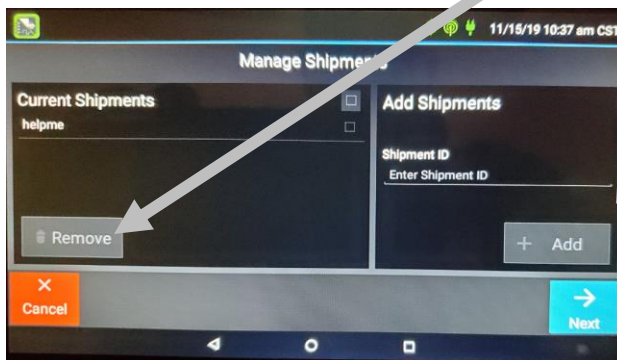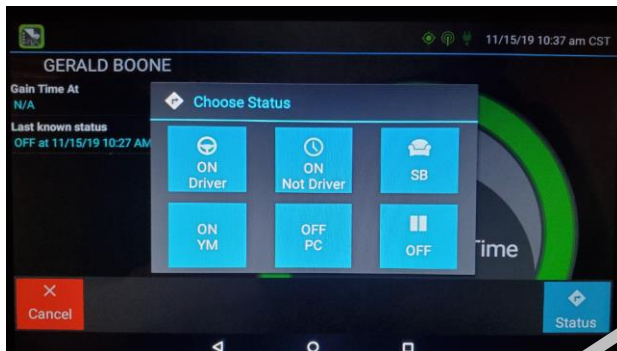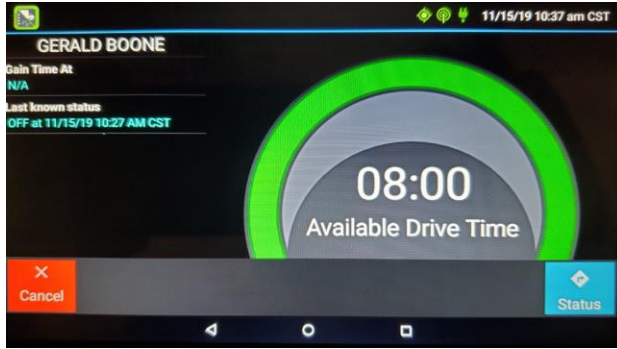ELD LOGIN / OPERATION




- You are still not completely logged in; tap STATUS
- Choose the status you would like to be in.

- Manage Shipments will come up. This must be 1. BOL# or 2. Commodity/Shipper.
 - To DELETE, tap on info under Current Shipments then tap Remove.
 - To ADD, tap on Enter Shipment ID, type in info and tap +Add

- Again, notice the checkmark . You can tap that after you enter Shipment ID, OR tap the down arrow  to get rid of the keyboard and tap SUBMIT.






YOU ARE NOW LOGGED IN.

ELD LOGIN / OPERATION

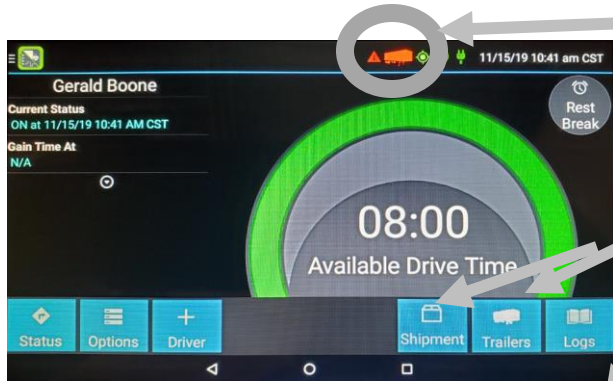


- Any time you see a caution symbol or trailer at the top, this means Shipping Information is not filled in
- If you still need to change your Shipping Information or Trailer # you can do that here.
- To change your duty status, tap Status (you can use the Rest Break for an off-duty event too. It doesn't matter which.)
- You can look at your logs/graph here.
- To return to the Main Icon screen tap the circle at the bottom center of the of the screen.
- Here you will see Workflow, Inbox, etc. Those operations remain the same.
- To change duty status, tap on the ELD eDriver Logs
- For Pre/Post Inspections, put yourself On Duty and then tap on the Inspection icon.

ELD LOGIN / OPERATION

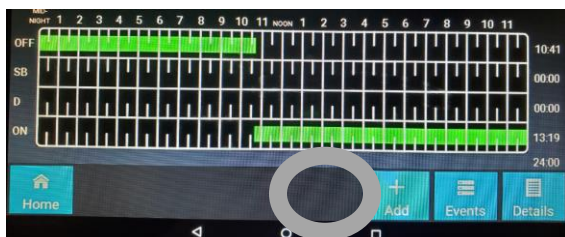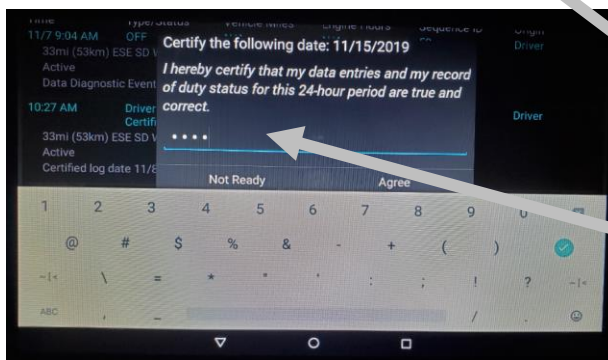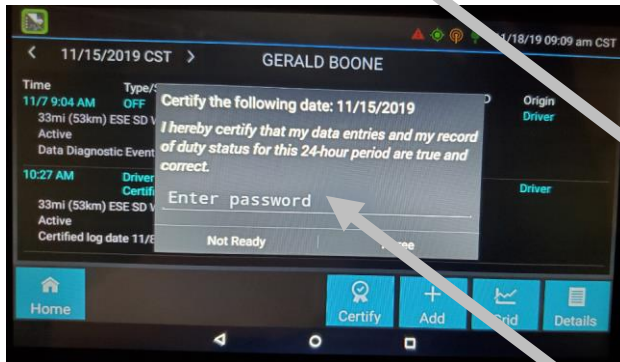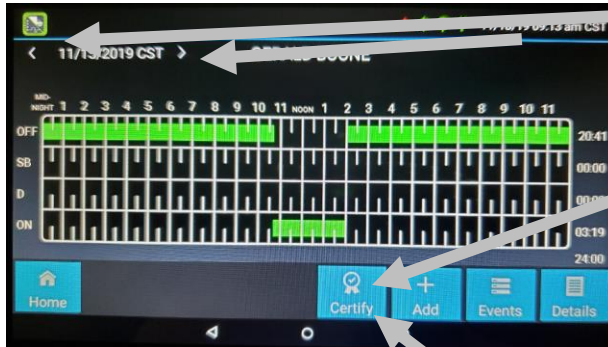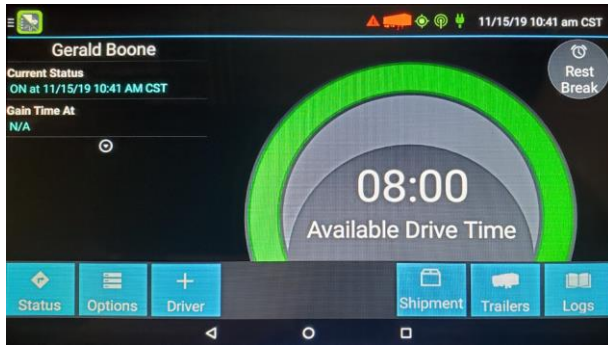

Certifying Your Logs

- You must certify your logs every day—only can be done one day at a time; no mass certifying so it's important to do it every day.
- From this screen, tap LOGS
- You can scroll through days by hitting the arrows by the date on the top left.
- If the CERTIFY icon is present at the bottom, your logs for that day have NOT been certified.
- **logs must be certified before changes can be made—i.e. changing from on-duty to off-duty.
- Tap the CERTIFY icon
- Every time you certify your logs you are required to enter your password (same password as you login with). Tap the Enter Password line and the keyboard will come up
- Type in your password and tap the checkmark in the circle  to submit
- Notice the CERTIFY icon is gone after that day is certified.